

1. Using an 8mm T-Handle or socket, remove the plastic OEM Skidplate. (FIG 1)
2. Applying provided foam adhesive to the frame rails.
3. Take the provided skid plate hook with the hook facing the back of the skidplate, thread in the two provided flat head 6x20 bolts. (FIG 2) Keep them loose until a later step.
4. Line the skidplate up underneath the bike and slide it backwards so the hook goes over the back frame rail of the bike.
5. Take the provided M6x16 socket head bolts and thread them into the OEM skidplate mounting location. (FIG 3) Leave loose until later step.
6. Slide in the provided skidplate strap behind the frame rails with the part number facing outward and rightside up. The strap will be above the two front engine mounts.
7. Thread the provided M8x40 flat head bolts through the skidplate mounting hole and into the skidplate strap. (FIG 4)
8. Using a 5mm Allen wrench, tighten the front two mounting bolts. (FIG 5)
9. Using an 8mm T-Handle or Socket, tighten the middle mounting bolts. (FIG 6)
10. Using a 4mm Allen Wrench, tighten the rear mounting bolts on the skidplate hook. (FIG 7)
11. Have fun and enjoy your next ride!



FIG 1



FIG 2



FIG 3



FIG 4



FIG 5

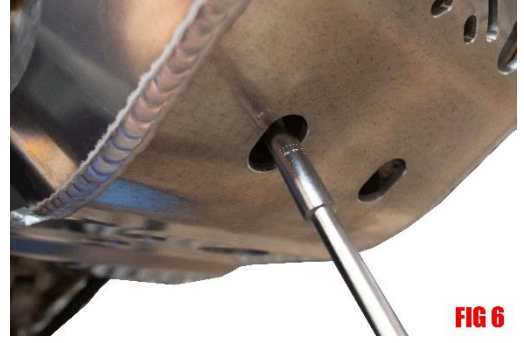


FIG 6



FIG 7

Scan QR for Video Instructions



## WARNING AND DISCLAIMER

All parts manufactured, designed or sold by Enduro Engineering, Inc. (EEI) are to be installed by a licensed motorcycle dealer or a licensed motorcycle technician. Motorcycles can be dangerous. Serious injury, death and property damage can result from the use of motorcycles. This risk is increased by improper installation or misuse of after market parts. EEI's customers must exercise good judgement in the use, control, alteration, part selection and installation, and maintenance of their motorcycles. In the event of a possible defect in material or design, or any other defect in a part manufactured, designed or sold by EEI, the responsibility of EEI is limited either a refund of the purchase price or the replacement of the part if EEI determines the part to be defective, and subject to EEI's inspection of the part within thirty (30) days from the date of purchase. (Note: any attempted repairs or modifications made to EEI Products will void this limited warranty.) EEI, under no circumstances will be responsible for incidental and/or consequential damages, property damage, personal injury damage, or damage, injury, cost or expense of any kind or nature whatsoever. By purchasing as product or a product sold by EEI, you (1) acknowledge the above disclaimer and agree to its terms; (2) agree that any claim brought against EEI arising from and/or pertaining to or otherwise related to a part manufactured, designed or sold by EEI must be brought in the Michigan State Courts located in the County of Ingham or in the Federal District Court for the Western District of Michigan and the Michigan law shall apply on all issues; and (3) any claim against EEI must be brought within one (1) year of purchase of the product. EEI makes no other warranty, express or implied, including without limitation any warranties of merchantability and fitness for a particular purpose.

Honda Skidplate Installation Instructions

Part Number: 24-6021

Quality Off-Road Motorcycle Products



enduroeng.com/517.393.2421/info@enduroeng.com