

1. Clean off frame rails and install foam adhesive tape anywhere the skid plate will come in contact with the frame. Be sure to not cover the mounting holes for the front of the skid plate.
2. Line up the skid plate to the frame. Using the provided M6x20 bolts thread through the aluminum spacer and into the frame of each of the front two mounting holes (FIG 1). Leave both loose for now.
3. Place the skid plate hook from the kit on top of the frame cross rail under the footpegs with the hook forward and the threaded holes face towards the back of the bike. (FIG 2)
4. Take the other two provided M6x20 bolts and thread through the rear mounting holes of the skid plate and into the skid plate hook. (FIG 3)
5. Using an 8mm T-Handle or socket, tighten the front 2 skid plate mounting bolts first (FIG 4), then tighten the rear 2. (FIG 5)
6. Have fun and enjoy your next ride!




**FIG 1**



**FIG 2**



**FIG 3**

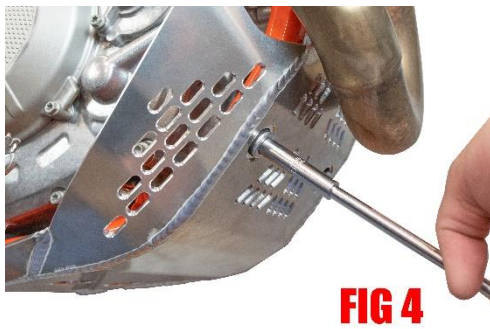

**FIG 4**



**FIG 5**

## WARNING AND DISCLAIMER

All parts manufactured, designed or sold by Enduro Engineering, Inc. (EEI) are to be installed by a licensed motorcycle dealer or a licensed motorcycle technician. Motorcycles can be dangerous. Serious injury, death and property damage can result from the use of motorcycles. This risk is increased by improper installation or misuse of after market parts. EEI's customers must exercise good judgement in the use, control, alteration, part selection and installation, and maintenance of their motorcycles. In the event of a possible defect in material or design, or any other defect in a part manufactured, designed or sold by EEI, the responsibility of EEI is limited either a refund of the purchase price or the replacement of the part if EEI determines the part to be defective, and subject to EEI's inspection of the part within thirty (30) days from the date of purchase. (Note: any attempted repairs or modifications made to EEI Products will void this limited warranty.) EEI, under no circumstances will be responsible for incidental and/or consequential damages, property damage, personal injury damage, or damage, injury, cost or expense of any kind or nature whatsoever. By purchasing as product or a product sold by EEI, you (1) acknowledge the above disclaimer and agree to its terms; (2) agree that any claim brought against EEI arising from and/or pertaining to or otherwise related to a part manufactured, designed or sold by EEI must be brought in the Michigan State Courts located in the County of Ingham or in the Federal District Court for the Western District of Michigan and the Michigan Law shall apply on all issues; and (3) any claim against EEI must be brought within one (1) year of purchase of the product. EEI makes no other warranty, express or implied, including without limitation any warranties of merchantability and fitness for a particular purpose.

## SKID PLATE INSTALLATION INSTRUCTIONS PART NUMBER 24-1116, 24-1016



[enduroeng.com//517.393.2421/info@enduroeng.com](http://enduroeng.com//517.393.2421/info@enduroeng.com)