## **Radiator Brace Instructions-Beta**

- Remove the seat by pressing the button on the left towards the rear of the motorcycle (fig. 1)
- 2 Remove the tank and shrouds.
- 2a Turn off the fuel valve, and disconnect the fuel lines.
- 2b Remove the two lower shroud mounting bolts (fig. 2)
- Using an 8mm socket remove the two bolts securing the tank (fig. 3)
- Remove the plastic radiator louvers (fig. 4)
- Using an 8mm socket remove the two radiator mounting bolts (fig. 5)
- Using the supplied M6x16mm button head bolts fasten the radiator rods to the piece labeled 402R/L1 (right or left side) (fig. 6)
- Install the assembly from the previous step between the radiator and the frame (fig. 7)
- Using the provided M6x16 hex head bolt, 22mm washer and spacer fasten the radiator and brace to the frame (fig. 8)
- 8 Connect the outer radiator brace labeled 402R/L2 (right or left side)

personal injury damage, or damage, injury, cost or expense of any kind or nature whatsoever. By purchasing an EEI product or a product sold by EEI, byu (I) acknowledge the above disclaimer and agree to its terms; (2) agree that any claim brought against EEI arising from and/or pertaining to or otherwise related to a part manufactured, designed or sold by EEI must be brought in the Michigan State Courts located in the County of Ingham or in the Federal District Court for the Western District of Michigan and that Michigan law shall apply on all issues; and (3) any claim against EEI must be brought within one (1) year of purchase of the product. EEI makes no other warranty, express or implied, including without limitation any warranties of merchantability and fitness for a particular

- Use the provided M6x8mm button head bolts to connect the back side of the radiator brace (fig. 9a & b) (combine both into one if possible).
- 8b Use the provided M6x16mm button head bolts to secure the radiator rods (fig. 10)
- 9 Complete steps 3-8 on both sides of the bike if not already done so.
- Put the radiator louvers back on the bike (fig. 4).
- Put the tank and shrouds back on the bike.
- Use the provided nylon spacers and 25mm bolts to secure the lower shroud to the radiator. (fig. 11)
- 11b NOTE: you may need to loosen all tank and shroud mounting bolts to align the lower shroud mounts.
- 11c Use the OEM hardware for the two tank mount locations.
- 11d Be sure to reconnect the fuel lines.
- 12 Put the seat back on.
- 13 Have fun and ride safe!














purpose. R.JRF.Sec.randt.warninganddisclaimer. 5 2 08









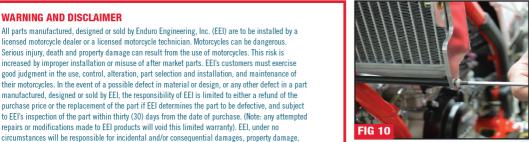





**QUALITY OFF-ROAD MOTORCYCLE PRODUCTS** 

INSTRUCTIONS

Part# 11-402