


1. Remove the Seat
2. Using an 8mm T-Handle or Socket, remove the 4 bolts mounting the radiator shroud. It does not matter what side you start with. (FIG 1)
3. Remove the front OEM Radiator Louver by pressing the mounting tabs inward while pulling the louver outward. (FIG 2)
4. Using an 8mm T-Handle or Socket, remove the 2 radiator mounting bolts. You will no longer need these 2 bolts, but you will reuse the washers. (FIG 3)
5. Install one of the inner mounts labeled 12-4020-02. Using 2 of the supplied 6x16FBJ bolts into the radiator mounting holes you removed in step 4. The washers you saved from step 4, will go between the inner mount and the radiator tabs. Make sure the front guard mounting holes are facing forward. (FIG 4)
6. Using an 8mm T-Handle or Socket, tighten the bolts from step 5 to factory torque specs.
7. Install the correct side outer mount labeled 12-4020-03R or 03L depending on the right side or the left side. Use 2 of the supplied 6x16FBJ bolts and 2 of the supplied Flat washers. The bolt will mount from the inside to outside passing through the Louver mounting holes into the Outer mount. Tighten using a regular combination 8mm wrench. (FIG 5)
8. Install the correct side front guard plate labeled 12-4020-01R or 01L depending on the right side or the left side. Using 6 of the provided 5x12 socket head bolts mount the front plate to the Inner and outer brackets with the Enduro Engineering sticker facing outward. Start each of the 6 socket head bolts by hand, then tighten using a 4mm allen wrench. (FIG 6)
9. Repeat steps 2-8 for the opposite side.
10. Reinstall both radiator shrouds removed in step 2.
11. Reinstall the seat.
12. Have fun and enjoy your next ride!

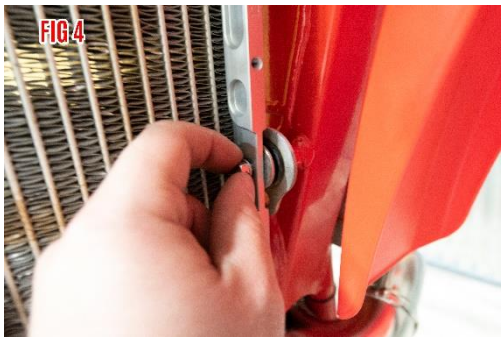

WARNING AND DISCLAIMER

All parts manufactured, designed or sold by Enduro Engineering, Inc. (EEI) are to be installed by a licensed motorcycle dealer or a licensed motorcycle technician. Motorcycles can be dangerous. Serious injury, death and property damage can result from the use of motorcycles. This risk is increased by improper installation or misuse of after market parts. EEI's customers must exercise good judgement in the use, control, alteration, part selection and installation, and maintenance of their motorcycles. In the event of a possible defect in material or design, or any other defect in a part manufactured, designed or sold by EEI, the responsibility of EEI is limited to either a refund of the purchase price or the replacement of the part if EEI determines the part to be defective, and subject to EEI's inspection of the part within thirty (30) days from the date of purchase. (Note: any attempted repairs or modifications made to EEI Products will void this limited warranty.) EEI, under no circumstances will be responsible for incidental and/or consequential damages, property damage, personal injury damage, or damage, injury, cost or expense of any kind or nature whatsoever. By purchasing as EEI product or a product sold by EEI, you (1) acknowledge the above disclaimer and agree to its terms; (2) agree that any claim brought against EEI arising from and/or pertaining to or otherwise related to a part manufactured, designed or sold by EEI must be brought in the Michigan State Courts located in the County of Ingham or in the Federal District Court for the Western District of Michigan and the Michigan law shall apply on all issues; and (3) any claim against EEI must be brought within one (1) year of purchase of the product. EEI makes no other warranty, express or implied, including without limitation any warranties of merchantability and fitness for a particular purpose.

Installation Instructions 12-4020 Beta Radiator Guard

Quality Off-Road Motorcycle Products



enduroeng.com//517.393.2421//info@enduroeng.com