
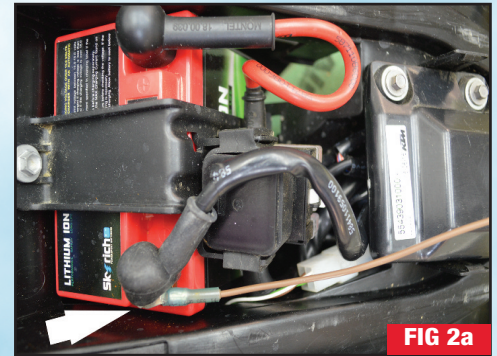


EE Installation Instructions

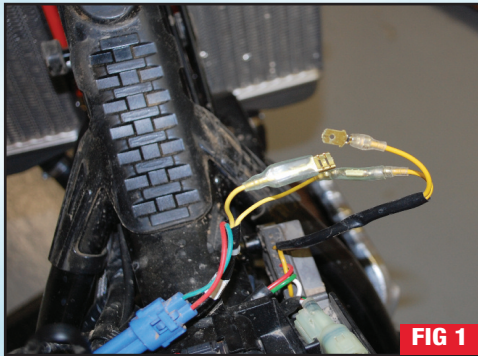

WARNING AND DISCLAIMER

All parts manufactured, designed or sold by Enduro Engineering, Inc. (EEI) are to be installed by a licensed motorcycle dealer or a licensed motorcycle technician. Motorcycles can be dangerous. Serious injury, death and property damage can result from the use of motorcycles. This risk is increased by improper installation or misuse of after market parts. EEI's customers must exercise good judgment in the use, control, alteration, part selection and installation, and maintenance of their motorcycles. In the event of a possible defect in material or design, or any other defect in a part manufactured, designed or sold by EEI, the responsibility of EEI is limited to either a refund of the purchase price or the replacement of the part if EEI determines the part to be defective, and subject to EEI's inspection of the part within thirty (30) days from the date of purchase. (Note: any attempted repairs or modifications made to EEI products will void this limited warranty). EEI, under no circumstances will be responsible for incidental and/or consequential damages, property damage, personal injury damage, or damage, injury, cost or expense of any kind or nature whatsoever. By purchasing an EEI product or a product sold by EEI, you (1) acknowledge the above disclaimer and agree to its terms; (2) agree that any claim brought against EEI arising from and/or pertaining to or otherwise related to a part manufactured, designed or sold by EEI must be brought in the Michigan State Courts located in the County of Ingham or in the Federal District Court for the Western District of Michigan and that Michigan law shall apply on all issues; and (3) any claim against EEI must be brought within one (1) year of purchase of the product. EEI makes no other warranty, express or implied, including without limitation any warranties of merchantability and fitness for a particular purpose. R.JRFSec.randt.warninganddisclaimer. 5 2 08

- 1** Remove the seat and gas tank.
- 2** **ONLY use this step if you are installing the lighting kit on a 250/350/450 FC/FX model.**

Unplug one of the yellow wires from the stator that is in front of the DCI box at the frame/sub frame junction. (**Fig 1**) Plug in the new lighting wiring harness with the yellow male lead going to the yellow female lead on the stator and the yellow female lead going to the yellow male lead on the stator. (**Fig 2**) Attach the ground loop from the harness to the battery. (**Fig 2A**) The other two female spade connectors on the harness go to your headlight switch and the square connector will plug into your headlight.
- 3** Remove the rear fender. Save the mounting bolts. You will re-use them on the new fender.
- 4** Set the supplied new taillight assembly fender in place on the sub frame.
- 5** Place the new under fender & tail light assembly up to the bottom of the sub-frame. Pull the tail light connector through the access hole in the fender.
- 6** Run the tail light connector wire into the air box as shown. (**Fig 3**)
- 7** Install and tighten the four rear fender bolts that were removed in step 4.
- 8** Re-install gas tank and seat.
- 9** Remove number plate.
- 10** Route the front brake hose through the lower hose guide of the provided head light.
- 11** Plug the headlight into the wiring harness. Plug the yellow and white wires from the wiring harness into the headlight switch on the headlight mask.
- 12** Set the headlight mask into the guide holes in the front fender. Fasten the rubber headlight straps around the fork legs.

**Enduro
Engineering**

QUALITY OFF-ROAD MOTORCYCLE PRODUCTS

INSTRUCTIONS

EE Installation

Part# 30-816, 30-817