## **Enduro Engineering Installation Instructions**

<sup>1</sup> Use an 8mm socket to remove the two bolts holding on the OEM plastic skid plate.

<sup>1a</sup> The OEM 6mm clip nuts can be removed as well.

2 Replace the rear clip nut with the provided 8mm clip nut.(fig. 1)



Position the EE skid plate up against the frame. Using the two provided 8x40mm flat head bolts, fasten the plate to the front bracket, and do not tighten at this time (fig. 3)






## WARNING AND DISCLAIMER

All parts manufactured, designed or sold by Enduro Engineering, Inc. (EEI) are to be installed by a licensed motorcycle dealer or a licensed motorcycle technician. Motorcycles can be dangerous. Serious injury, death and properly damage can result from the use of motorcycles. This risk is increased by improper installation or misuse of after market parts. EEI's customers must exercise good judgment in the use, control, alteration, part selection and installation, and maintenance of their motorcycles. In the event of a possible defect in material or design, or any other defect in a part manufactured, designed or sold by EEI, the responsibility of EEI is limited to either a refund of the purchase price or the replacement of the part if EEI determines the part to be defective, and subject to EEI's inspection of the part within thirty (30) days from the date of purchase. (Note: any attempted repairs or modifications made to EEI products will void this limited warranty). EEI, under no circumstances will be responsible for incidental and/rc consequential damages, properly damage, personal injury damage, or damage, injury, cost or expense of any kind or nature whatsoever. By purchasing an EEI product or a product sold by EEI, you (1) acknowledge the above disclaimer and agree to its terms; (2) agree that any claim brought against EEI anising from and/or pertaining to or otherwise related to a part manufactured, designed or sold by EEI, must be brought in the Michigan and that Michigan law shall apply on all issues, and (3) any claim against EEI must be brought within one (1) year of purchase of the product. EEI makes no other warranty, express or implied, including without limitation any warranties of merchantability and fitness for a particular purpose. RJRF.Sec.randt. <sup>5</sup> Using the provided 8x25mm hex head bolt, fasten the rear section of the plate to the 8mm clip nut installed in step 2. (fig. 4)

<sup>6</sup> Once the front and rear bolts have been started you can begin to tighten them alternating from front to back, while pressing the plate up against the bike.

7 Have fun and ride safe!

Add Enduro Engineering Linkage Guard Part Number: 31-4117

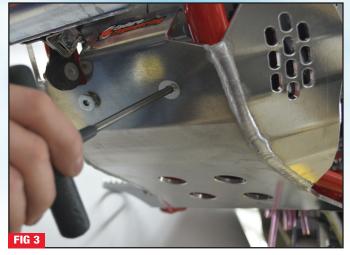





QUALITY OFF-ROAD MOTORCYCLE PRODUCTS

INSTRUCTIONS Enduro Engineering Installation Part# 24-402