

1. Install the chainsaw scabbard into the chainsaw mount (Fig. 1).
2. Attach the scabbard to the chainsaw mount with the guide/bar support block using the supplied phillips head screws (Fig. 2).
3. While on the workbench now would be a good time to insert your chainsaw into the mount to adjust to the lower base support block if needed. There are two positions (Fig. 3).
4. Remove the headlight/number plate (Fig. 4).
5. With the fork tube blocks lightly tightened, position the chainsaw mount onto the center of the fork legs of the motorcycle. Locate the lower fork blocks right above the lower triple clamp. Position the upper fork leg mounts accordingly (Fig. 5).
6. Turn Page over for Remainder of steps. -->

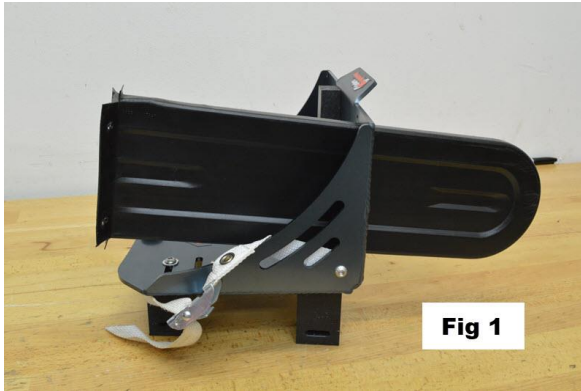


Fig 1



Fig 2

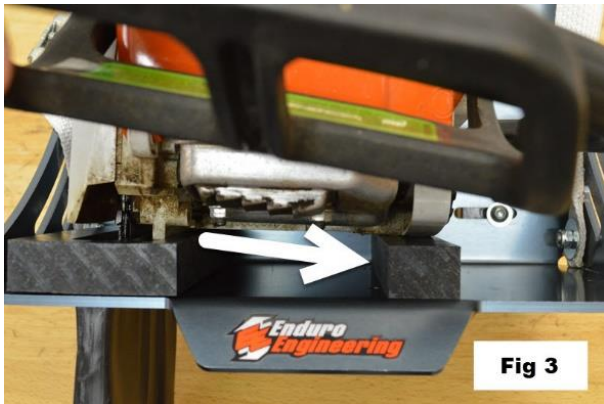


Fig 3

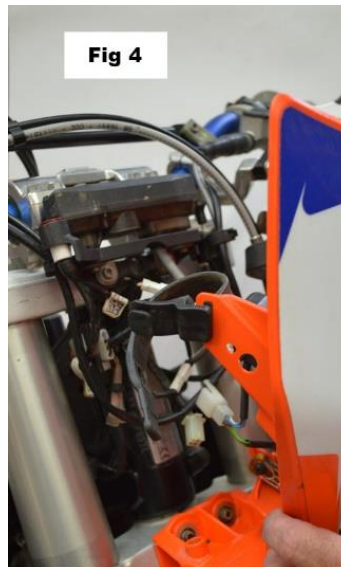


Fig 4



Fig 5

WARNING AND DISCLAIMER

All parts manufactured, designed or sold by Enduro Engineering, Inc. (EEI) are to be installed by a licensed motorcycle dealer or a licensed motorcycle technician. Motorcycles can be dangerous. Serious injury, death and property damage can result from the use of motorcycles. This risk is increased by improper installation or misuse of after market parts. EEI's customers must exercise good judgement in the use, control, alteration, part selection and installation, and maintenance of their motorcycles. In the event of a possible defect in material or design, or any other defect in a part manufactured, designed or sold by EEI, the responsibility of EEI is limited to either a refund of the purchase price or the replacement of the part if EEI determines the part to be defective, and subject to EEI's inspection of the part within thirty (30) days from the date of purchase. (Note: any attempted repairs or modifications made to EEI Products will void this limited warranty.) EEI, under no circumstances will be responsible for incidental and/or consequential damages, property damage, personal injury damage, or damage, injury, cost or expense of any kind or nature whatsoever. By purchasing as EEI product or a product sold by EEI, you (1) acknowledge the above disclaimer and agree to its terms; (2) agree that any claim brought against EEI arising from and/or pertaining to or otherwise related to a part manufactured, designed or sold by EEI must be brought in the Michigan State Courts located in the County of Ingham or in the Federal District Court for the Western District of Michigan and the Michigan law shall apply on all issues; and (3) any claim against EEI must be brought within one (1) year of purchase of the product. EEI makes no other warranty, express or implied, including without limitation any warranties of merchantability and fitness for a particular purpose.

Part Number: 25-Chainsaw Mount

Chainsaw Mount Installation Instructions
Quality Off-Road Motorcycle Products

Enduro Engineering

enduroeng.com/517.393.2421/info@enduroeng.com

25-CHAINSAWMOUNT INSTALLATION INSTRUCTIONS

7. Determine if the brake hose guide fork tube blocks need to be facing inward or outward depending length of brake hose. Tighten the four torx screws for the brake hose guide. In most cases motorcycles w/headlight the brake hose guide will be outward facing. With number plate the brake hose guide will be inward facing. (Fig. 6 and 6.1).
8. Using the (4) supplied nylon buckle straps insert into the fork tube blocks and pull tight (Fig. 7)
9. Now tighten the button head bolts that connect the fork tube blocks to the chainsaw mount (Fig 8).
10. Insert the chainsaw into the chainsaw mount using the tie down strap as shown to make sure everything is secured (Fig. 9 and 9.1)
11. For video instructions please visit enduroeng.com search item # 25-chainsaw mount.

