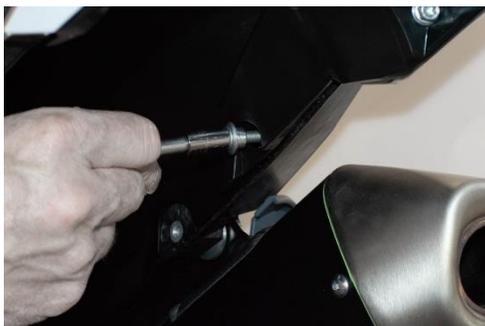


TAIL LIGHT INSTALLATION INSTRUCTIONS (Turn Page over for Headlight Installation Instructions)

1. Remove the seat and gas tank.
2. Remove the air box cover and top half of the right side number plate to gain access to the rear fender mounting bolts.
3. Remove the rear fender. Save the mounting bolts. You will re-use them on the new Fender.
4. Using an 8mm T-Handle or Socket Remove the two bolts holding the air box flap to the sub frame. (FIG 1)
5. Set the supplied new TE or FE Fender/ Under fender light in place on the sub frame. You will need to take a flat head screwdriver (FIG 2) to separate the sub frame and the air box flap enough to tuck the tab of the under fender light between them. (FIG 3) This is a tasking job but has a cleaner finish. To make installation easier you can cut the tab off of the under fender tail light that would tuck between the air box flap and the sub frame. (FIG 3.1) Reinstall bolts you removed in step 4 along with supplied bushings.
6. Be sure to run the tail light connector through the rear fender on the right side of the sub frame into the wire tab.
7. Replace all mounting bolts you removed in step 3.
8. Run the Tail Light connector through the side opening of the sub frame into the area of the battery. You may want to use a zip tie to hold the wire up against the sub frame. (FIG 4)
9. Plug Square Tail Light Connector into the wiring harness located near the battery with the matching connection of the Tail Light Connector. It may be tucked inside of the air box. (FIG 5)
10. Replace Side covers, gas tank, and seat.
11. Have Fun and enjoy your next ride.

**FIG 1****FIG 2****FIG 3****FIG 3.1****FIG 4****FIG 5****WARNING AND DISCLAIMER**

All parts manufactured, designed or sold by Enduro Engineering, Inc. (EEI) are to be installed by a licensed motorcycle dealer or a licensed motorcycle technician. Motorcycles can be dangerous. Serious injury, death and property damage can result from the use of motorcycles. This risk is increased by improper installation or misuse of after market parts. EEI's customers must exercise good judgement in the use, control, alteration or selection and installation, and maintenance of their motorcycles. In the event of a possible defect in material or design, or any other defect in a part manufactured, designed or sold by EEI, the responsibility of EEI is limited to either a refund of the purchase price or the replacement of the part if EEI determines the part to be defective, and subject to EEI's inspection of the part within thirty (30) days from the date of purchase. (Note: any attempted repairs or modifications made to EEI Products will void this limited warranty.) EEI, under no circumstances will be responsible for incidental and/or consequential damages, property damage, personal injury damage, or damage, injury, cost or expense of any kind or nature whatsoever. By purchasing as EEI product or a product sold by EEI, you (1) acknowledge the above disclaimer and agree to its terms; (2) agree that any claim brought against EEI arising from and/or pertaining to or otherwise related to a part manufactured, designed or sold by EEI must be brought in the Michigan State Courts located in the County of Ingham or in the Federal District Court for the Western District of Michigan and the Michigan law shall apply on all issues; and (3) any claim against EEI must be brought within one (1) year of purchase of the product. EEI makes no other warranty, express or implied, including without limitation any warranties of merchantability and fitness for a particular purpose.

PART NUMBER 30-2019, 30-2019RT, 30-2019HL

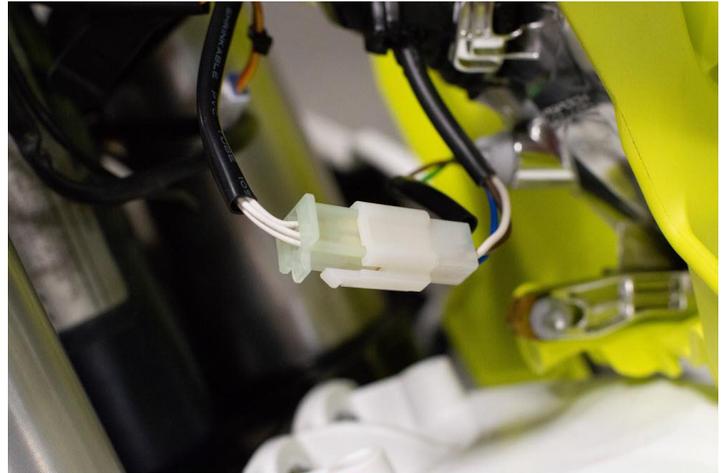
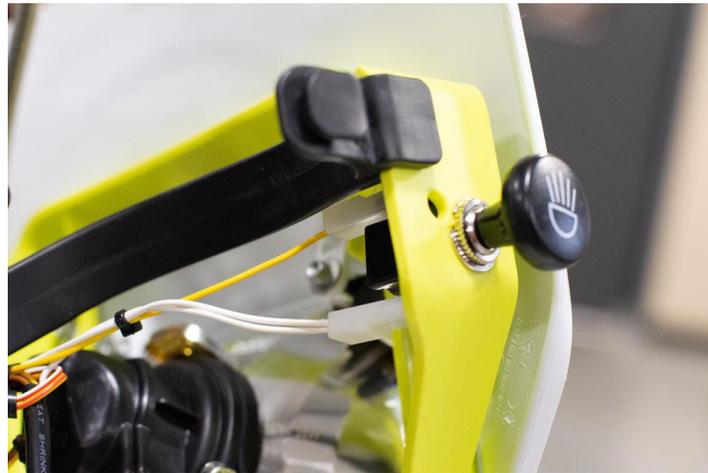
LIGHT KIT INSTALLATION INSTRUCTIONS

Quality Off-Road Motorcycle Products
**Enduro
 Engineering**

enduroeng.com/517.393.2421/info@enduroeng.com

HEAD LIGHT INSTALLATION INSTRUCTIONS

1. Remove the front number plate.
2. Using a T-25 Torx wrench, remove the Yellow hose guide on your new Head light. (FIG 1)
3. Route the front brake hose through the guide and replace the Hose Guide you removed in Step 2.
4. Plug the headlight into the square wiring harness plug. (FIG 2) Plug the yellow and white wires from the wiring harness into the headlight switch on the side of the headlight mask. (FIG 3)
5. Set the headlight mask into the guide holes in the front fender. Fasten the rubber headlight straps around the fork legs.
6. Have fun and enjoy your next ride.

**FIG 1****FIG 2****FIG 3**